

This document provides additional assistance with wiring your Extron IP Link enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific Extron IP Link enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Video Projector
Manufacturer: Eiki
Firmware Version: N/A
Model(s): LC-XB40

Version History:

| Driver Version | Date | IP Link Compiler | IP Link Firmware | GVC Version | GC2 Version | Notes |
|-------------------|---------|---------------------|---------------------|----------------|----------------|------------------------|
| 1 | 4/26/07 | 1.0.9.3 | 1.10 | 1.8 | 2.2 | Initial, Beta Version. |

Driver Notes:

IP Link® Device Interface Communication Sheet

Control Commands & States:

| | | |
|---------------------|---|--|
| Aspect Ratio | 4:3 | 16:9 |
| Audio Mute | On | Off |
| Auto Image | Execute | |
| Freeze | On | Off |
| Input | Computer1 (A) RGB Computer2 Scart Video (Composite) | Computer2 (YPbPr) Video Auto Video (S) |
| Power | On | Off |
| Video Mute | On | Off |
| Volume | Up | Down |

Status Available:

| | | |
|--------------------------|--|---|
| Connection Status | Connected | Disconnected |
| Device Status | Normal Temp Warning and Recovered Status Unavailable | Power Fail Power Management Cooling Process Cooling Down (Abnormal Temperature) Power Save |
| Input Status | Input 1 Status Unavailable | Input 2 Input 3 |
| Lamp Usage | Hours | |
| Power | On | Off |
| Power Status | On Cooling Down | Off Status Unavailable Warming Up |

Cable and Adapter Requirements:

M/F RS-232 straight serial cable (Extron Electronics P/N 26-433-03)

Use control adapter Mini 8 Pin DIN to DB9 Serial Cable that is supplied with projector.

Notes for the Device:

Serial communication:

Port Type: RS232

Baud Rate: 19200


Data Bits: 8

Parity: None

Stop Bits: 1

Flow Control: None

Pin Assignments Diagram:

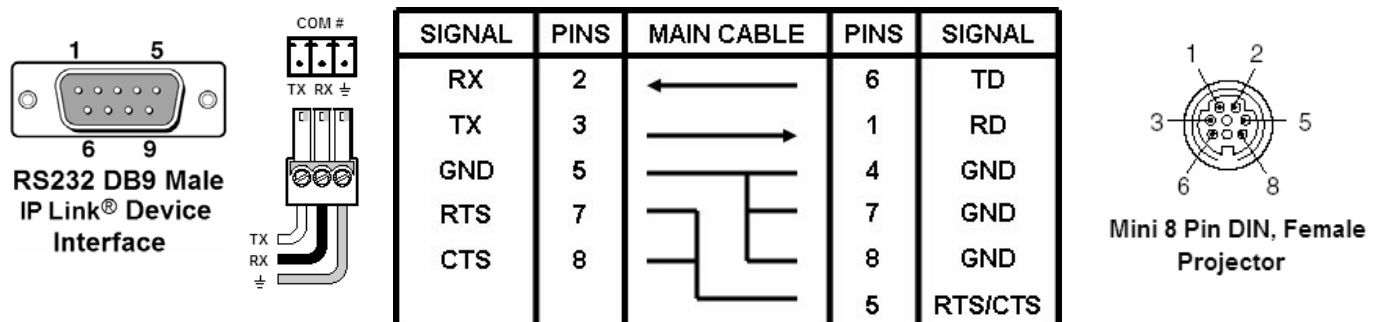

Note: Captive screw connector may also be used as a serial connection by shorting projector's RTS/CTS pin to ground. If a communication problem exists, try grounding Pin 5 (RTS/CTS) of the 8 PIN together with Pin 4, 7, & 8.

General Notes: